



Range Hood Mounting Instructions

CHIMNEY RANGE HOOD FRONT INSTALLATION INSTRUCTIONS:

- 1) Chimney Range Hood Fronts are designed to be mounted between two wall cabinets.
- 2) Mount wall cabinets as outlined by manufacturer allowing 1/8" more space than the specified range hood width (i.e.; for 30" hood front use 30-1/8" spacing).
- 3) Exposed wood edges should be no less than 30" above cooking surface.
- 4) Drill 2-3 pilot holes horizontally through wall cabinet face frame on each side where range hood front is to be mounted.
- 5) Mount Ventilation Power Pack securely to T-Shaped Steel Liner as outlined in ventilator instruction packet.
- 6) Choose appropriate height and locate Liner/Ventilator assembly between two adjacent wall cabinets so that liner is a minimum of 30" above cooking surface and touching rear wall. The narrow portion of the T-Liner is to be facing forward with the ventilator duct opening pointed up.
- 7) Secure Liner/Ventilator assembly to adjacent wall cabinets with wood screws. Use two screws on each side (#6 x 1/2").
- 8) Fasten Liner assembly to rear wall, screwing into studs where available. If studs are not available, install using drywall anchors.
- 9) Install duct work or ductless kit to ventilator power pack according to manufacturer's guidelines.
- 10) Fit Chimney Range Hood Front into opening between adjacent wall cabinets so it is flush with wall cabinet face frame and covering Liner/Ventilator assembly.
- 11) Secure Chimney Range Hood Front to adjacent wall cabinets on both sides using framing screws (#8 x 2-1/2").

