


Removable Access Mounting Instructions

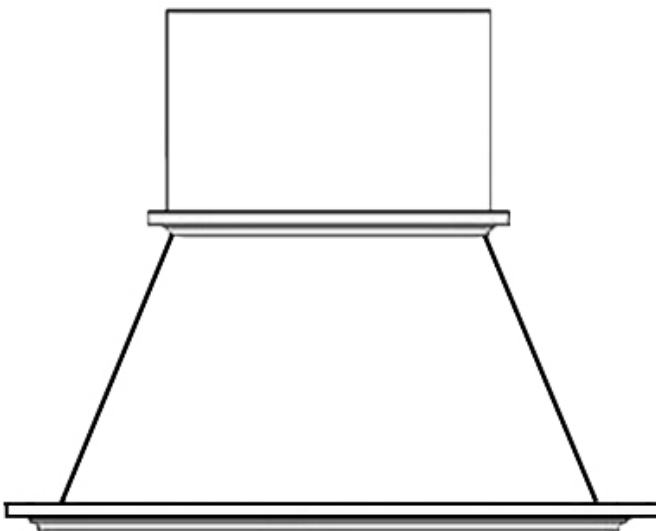

REMOVABLE ACCESS RANGE HOOD INSTALLATION INSTRUCTIONS:

- 1) Locate available studs in area where the Removable Access Range Hood is to be installed.
- 2) Align the Lower section of the Range Hood so at least two screws will be secured through the back and into each of the available studs.
- 3) Refer to manufacturers guidelines that accompany stove/cook-top that will be located beneath Chimney Range Hood.
- 4) Exposed wood edges should be no less than 30" above cooking surface.
- 5) Attach Lower Section of the Range Hood to wall using #8 x 2-1/2" framing screws.
- 6) Check to make sure Lower Section is secure before proceeding.
- 7) Install steel liner and ventilator in accordance with manufacturer's guidelines.
- 8) Mount liner/ventilator assembly to inside of hood opening using available mounting holes and secure unit with wood screws (#6 x 1/2").
- 9) Attach appropriate ducting and wiring in accordance with manufacturer's guidelines.
- 10) At this time the assembly is ready to be inspected in accordance with local building codes.
- 11) Slide Upper Section of the Range Hood over the Lower Section.
- 12) The two sections should nest with the decorative molding covering the seam between sections.
- 13) Using brad nails, fasten the upper section to lower section through the decorative molding.
- 14) To install Chimney Extension over ductwork the back stretchers may have to be cut. Cut away just enough of the stretcher to fit around the ductwork.
- 15) Secure the Chimney Extension to the Chimney Hood by toe nailing the base of the extension to the hood with brad nails.



Removable Access Upper Section



Removable Access Lower Section