




Follow these instructions to properly locate and attach Chimney Extension Trim Kits.

Chimney Trim Kit Installation

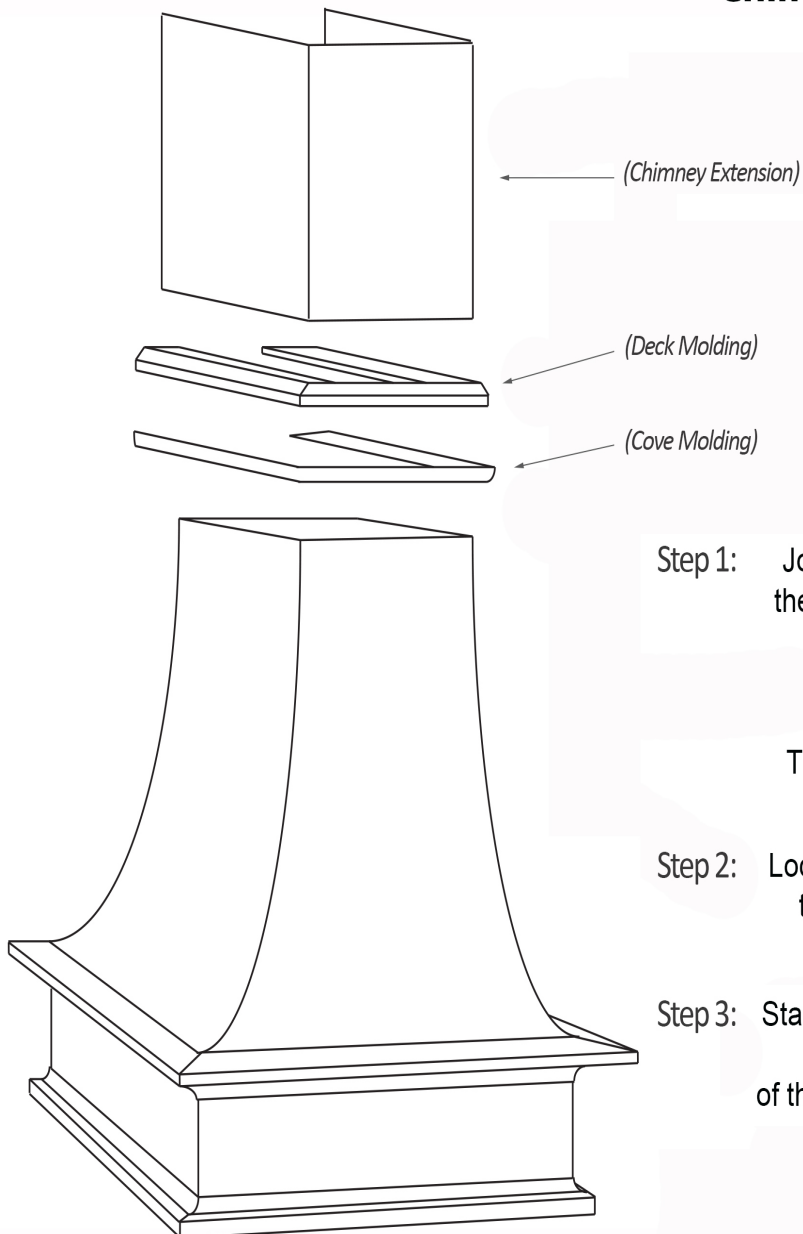

Step 1: Join the three **deck molding** pieces together at the miters to create a frame and sit the assembly atop chimney hood so the outside edge of the unit overhangs the top edge of the hood by approximately 3/4".

The assembled frame may need to be trimmed at the back to achieve the desired depth.

Step 2: Locate the **decorative cove molding** underneath the deck molding and apply against the body of the range hood.

Step 3: Stack the **chimney extension** atop the assembled trim kit and set back so approximately 3/4" of the trim kit sticks out past the chimney extension.

